

Pro — How to Use

Step-by-step operating instructions for the fully automatic Pro wash station.

Use of the machine is at your own risk. We accept no liability for damage to the bicycle or splash water on clothing.

1 Wash programme & payment (contactless)

- The following payment methods are available: credit card, EC card, Apple Pay, Google Pay, loyalty card, etc.
- Choose a wash programme on the display — ECO (closed water circuit, no detergent) or Standard (fresh water, with cleaner for heavier soiling); each can be combined with drying where fitted. The price of the wash is shown.
- Hold your card or smartphone to the display for 2–3 seconds to pay.
- After successful payment there is an audible confirmation and the blue start button on the machine lights up.
- CAUTION: please do NOT press the blue button yet.
- CAUTION: while the machine is active, please do not pay again — this can cause a duplicate charge.

2 Pre-clean

- Before the main wash, you can pre-clean your bike by hand at the designated spot outside the machine.
- Use LuftWASH to remove coarse dirt.
- You have 5 minutes for pre-cleaning.

3 Position the bike

- Open the door and position your bike in the cycleWASH Pro.
- TIP: the Load-Bike function makes it easier to push the bike in.
- TIP: the upper splash-guard brushes can be left open if a basket, child seat, drop handlebar or similar doesn't fit through.
- Close both doors. The status light in the machine changes from red to blue.
- Make sure the wheels are centred in the roller guide on the wheel-turn unit.

4 Main wash (drying optional)

- Press the blue start button: the wash starts, the status light in the machine changes to green.
- Make sure the bike stays straight and the wheels rotate by themselves on the wheel-turn unit. It's best to hold the handlebar during washing & drying.
- NOTE: if the status light is red, a door is probably not closed properly — close the door and press the blue button.
- TIP: the start button briefly pauses the cleaning (max. 90 sec.) — press it again to resume, e.g. to reposition your bike.
- The machine stops automatically after cleaning; the status light in the machine changes to blue.
- CAUTION: when drying (blowers) switches on at the end of the cycle, the upper splash-guard brushes fold open so excess water can drain away.

In case of a fault or emergency, press the red emergency-stop button! The machine stops immediately.

Questions or problems? Contact our service hotline: +49 221 650 540 33 · sales@cyclewash.com